

# Angling Technics Ltd

## Resetting the steering on the following boats. Microcat "HD", Technicat MkII & Procat MkIV

If the boat is not travelling straight when the doors are closed and the boat is empty please follow the instructions below to reset the steering.

Have all the sliding trims centrally positioned.

Have the left-hand joystick in the "Down" position (Lights Off) and move the left hand vertical sliding trim three quarters "up".

Switch the transmitter "on" and place the boat in the water and turn it "on" also.


Steer the boat so that it is travelling in a straight line.

You may have to also move the joystick slightly left or right to achieve that.

When the boat is travelling straight, take the left-hand joystick and move it fully up and down quickly. The lights on the boat should flash to let you know that it has memorised that.

If you have done the above correctly then the boat should now travel straight.

If the problem is still there or you have made it worse, then the above procedure can be repeated as often as you like.

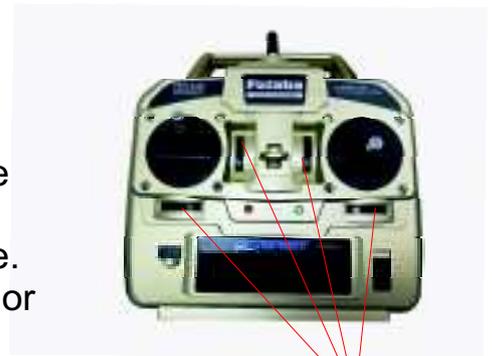

Sliding Trims



Left-hand joystick with Horizontal trim three quarters up